DETAILED WRITTEN INSTALLATION INSTRUCTIONS

In bench/hob requirements -2 of ½" BSP male threads at 165mm centres or 2 of 25.4mm holes for male threads through bench top at 165mm centres (if using locking nuts). Please note: the hob cover plates are approx. 64mm diameter.

- 1. If using male threads fixed into the hob. Mount risers onto male threads in the hob at 165mm centres, turn until fully seated and with elbow outlet facing forward. If using the male tails out of the legs use the lock nuts to retain to the bench/hob.
- 2. Assemble fibre washer onto union tail and make sure it is well seated onto the union nut.
- 3. & 4. Screw union nut and tail into elbow, tighten union tail making sure you use thread sealant and making sure that union nut can freely spin. Put fibre washer in after.
- 5. Tighten Diverter assembly onto union nuts by hand making sure Diverter assembly is upright. Tighten with spanner.
- 6. Cradle assembly should appear as in diagram.
- 7. Fit nut and olive on cradle stem and tighten down onto diverter body. Tighten with spanner.
- 8. Fit hose to thread connection on cradle stem. Tighten by hand.

IMPORTANT Maximum hot water temperature 65°C and 500 kPa Maximum operating pressure at any outlet within a building (Ref AS/NZS 3500)

WARRANTY The Company accepts responsibility for any fault due to the Company's own workmanship or materials except for subjective variations or random unavoidable blemishes of a minor non-functional nature. This acceptance of responsibility is for 5 years from the date of installation, proof of which may be required.




CB IDEAL TAPWARE PTY LTD

1A DELORAINE ROAD, EDWARDSTOWN S.A. 5039 PH: (08) 8276 6766 | sales@cbideal.com.au ABN: 98 156 625035 | ACN: 156 625 035

CAST BATH/SHOWER DIVERTER WITH CRADLE & HANDSHOWER WITH HOB LEGS SET

INSTALLATION INSTRUCTIONS

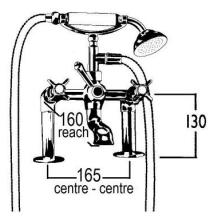

www.cbideal.com.au | sales@cbideal.com.au

