DETAILED WRITTEN INSTALLATION INSTRUCTIONS In wall requirements –2 x ½" BSP male threads at 150mm centres

- 1. Take angle taps from set as supplied, install pressed flanges and taps on to in-wall threads (use thread tape) with outlets of taps pointing upwards.
- 2. Fit nuts and olives on to breeching piece.
- 3. Tighten nuts down on to outlets of taps in above with a spanner.
- Install pillarclip on wall at a suitable point vertically above centre thread on breeching piece connection, to hold shower riser tube (Half the length of the riser tube above breeching piece or higher).
- 5. Fit shower riser (with nut and olive) to centre thread on breeching piece and tighten with a spanner. The shower riser tubing can be cut to the desired height.
- 6. Fit shower riser tube in to pillarclip and tighten with a flat-head screwdriver. TAKE CARE as the riser tube can be easily scratched by pillarclip.
- 7. Attach rose ball joint assembly to the riser with a spanner and tighten. Use thread tape. Grease ball joint as required.
- 8. Put o-ring on rose as per diagram and attach rose to ball joint assembly. Tighten by hand. TAKE CARE not to overtighten.

IMPORTANT Maximum hot water temperature 65° C and 500 kPa Maximum operating pressure at any outlet within a building (Ref AS/NZS 3500)


WARRANTY The Company accepts responsibility for any fault due to the Company's own workmanship or materials except for subjective variations or random unavoidable blemishes of a minor non-functional nature. This acceptance of responsibility is for 5 years from the date of installation, proof of which may be required.



CB IDEAL TAPWARE PTY LTD 1A DELORAINE ROAD, EDWARDSTOWN S.A. 5039 PH: (08) 8276 6766 | sales@cbideal.com.au ABN: 98 156 625035 | ACN: 156 625 035

ALCOVE SHOWER SET WITH GOOSENECK RISER

INSTALLATION INSTRUCTIONS

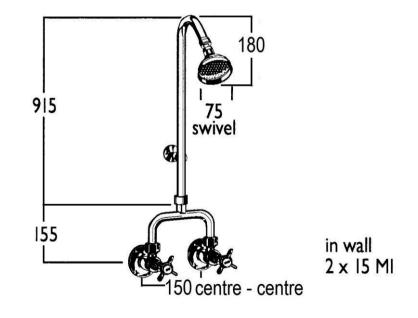

www.cbideal.com.au | sales@cbideal.com.au

