

DETAILED WRITTEN INSTALLATION INSTRUCTIONS

In wall requirements –2 x ½” BSP male threads at 150mm centres. Distance from wall to centre of threads is approximately 53mm.

1. Mount both floor flanges onto male threads, making sure appropriate thread sealant is used.
2. Mount pillar clips at an appropriate distance above and in line with male threads. Mount risers onto floor flanges.
3. Fit riser tubes on both inlets of tap assembly. Tighten with thread tape. Fit nuts and olives on to both riser tubes. Fit shower riser tubes into tap assemblies and tighten nuts onto tap assemblies with spanner.
4. Fit breech assembly onto risers and tighten with thread tape.
5. Fit arm on the riser and tighten with thread tape/sealant.
6. Fit nuts and olive on riser tube. Fit riser tube into breeching outlet and tighten with spanner.
7. Install pillarclip on wall approximately half the length of the riser tubes. Tighten pillarclips with a flathead screwdriver. TAKE CARE – as the riser tube can be easily scratched by pillar clip.
8. Attach rose with thread tape.

IMPORTANT Maximum hot water temperature 65° C and 500 kPa Maximum operating pressure at any outlet within a building (Ref AS/NZS 3500)

WARRANTY The Company accepts responsibility for any fault due to the Company’s own workmanship or materials except for subjective variations or random unavoidable blemishes of a minor non-functional nature. This acceptance of responsibility is for 5 years from the date of installation, proof of which may be required.



CB IDEAL TAPWARE PTY LTD


1A DELORAINÉ ROAD, EDWARDSTOWN S.A. 5039

PH: (08) 8276 6766 | sales@cbideal.com.au

ABN: 98 156 625035 | ACN: 156 625 035


TUBULAR BATH/SHOWER SET WITH BOTTOM ENTRY AND LEGS

INSTALLATION INSTRUCTIONS

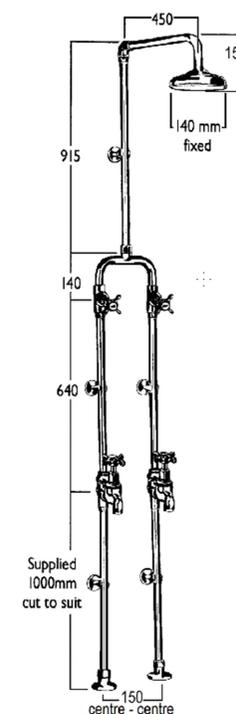


www.cbideal.com.au | sales@cbideal.com.au

1

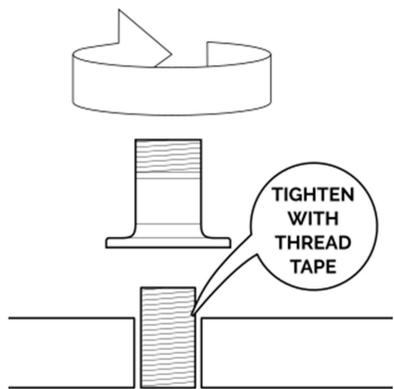


X2

2

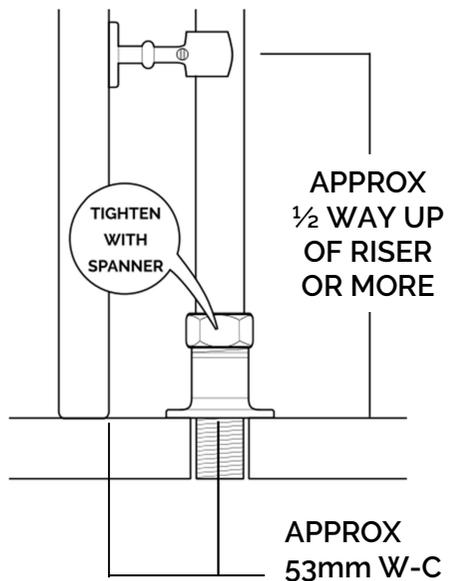


X2

3

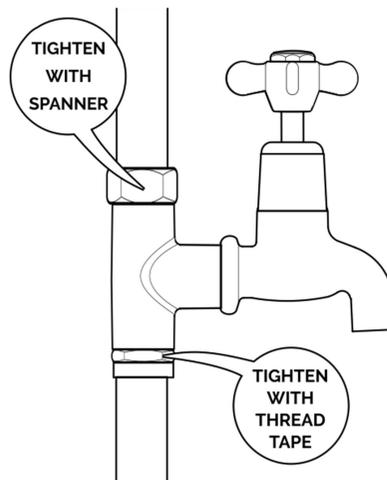


X2

4

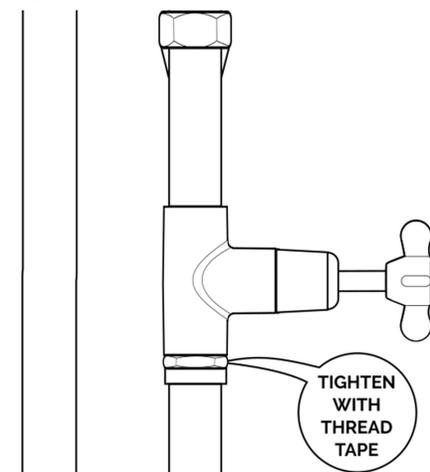


X2


5

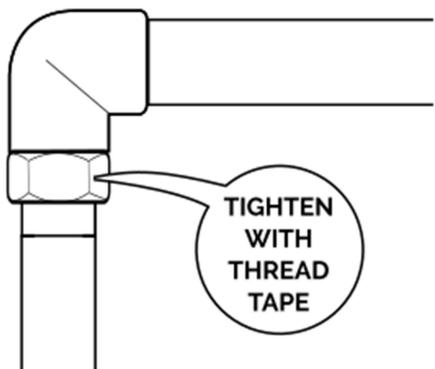

6

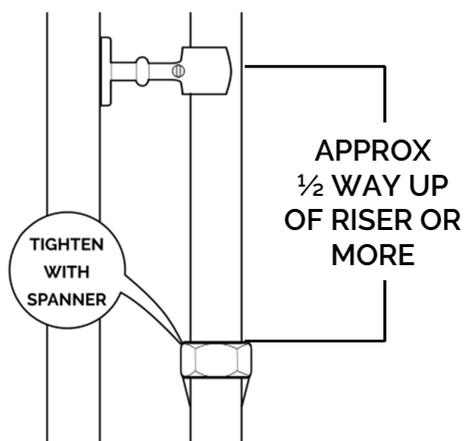

7

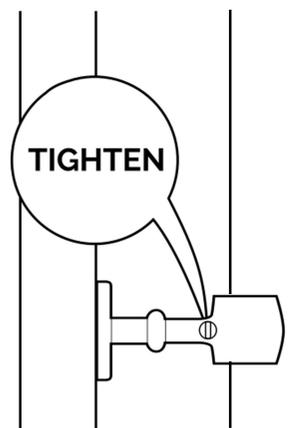

X5

8

